

Before you begin, ensure that the steel bed is in the press and the acrylic sheet is between the bed and top roller.

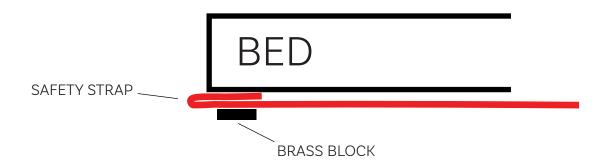

- 1. Loosen the two screws at the end of the bed where the strap is detached
- 2. Pass the safety strap under the bottom roller but over all the cross bars. See diagram below

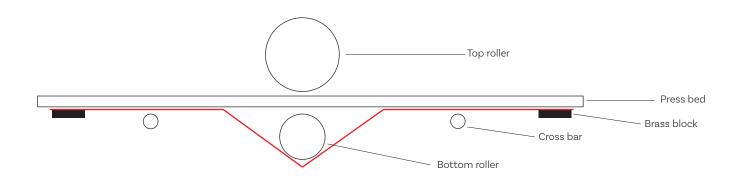

- 3. Put the safety strap between the brass block and the other end of the bed, making sure there are no twists in the strap.
- 4. Roll the bed back to its full extent until the brass block hits the bottom roller and the strap is tight.
- 5. Leave 100mm of strap hanging out. Cut at this mark.
- 6. Fold the strap over the same as the attached end, tighten the screws.